

ASR-010D

ASR-020D

AsReader

User Manual

Thank you for using the AsReader. This manual contains important safety instructions for using the AsReader. Please read the manual carefully and keep it as long as you have the device.


※We may refer to the AsReader as “the device” or “this device” in some sections of this manual.

Inside the Box

The following items are contained in the box. Please first make sure you have all of these items. In case that any items are missing, please contact the company from whom you purchased the device.

- AsReader1 pc
- Magnetic Cable1 pc
- Headset extension cable1 pc
- User Manual (this)1 pc

Parts of AsReader

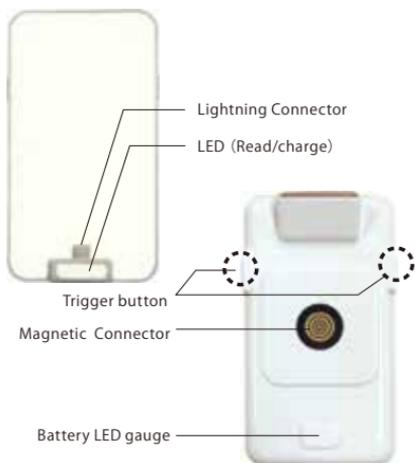

Before Using

There is a protect seal on the window of the barcode scanner. Please remove it before using AsReader.

Safety Instructions

Please read the following instructions carefully before use

Warning

In order to prevent damage or malfunctions, do NOT try to disassemble, modify, or repair the device by yourself.

Stop using the device if you found any smoke or abnormal smells emanating from the device.

Do not drop, throw, or stike the device. Do not expose this device to fire, high temperature or water. If you notice any damage to the device, stop using it.

Battery changing by the end user is not allowed. There is risk of fire, explosion, or burns.

Do not try to recharge the battery when the device is dripping wet or near any object filled with liquid. the magnetic connector is not water proof. Damage may occur if short-circuits or electrical shorts occur to the parts. Do not touch these parts with wet hands. Do not try to use this device in wet environments.

Do not try to use a broken charging cable or magnetic connector due to risks of electrical shorts.

Do not put this device on high temperature surfaces, such as car hoods or dashboards.

Don't look at the LED light on the bar code scanner due the risk of eye damage.

The device's magnetic connector has a magnet which may cause some risk of deletion of data on any magnetic cards. Therefore, please keep any magnetic cards, or related items, at least 100mm (4 inches) away from the device.

Caution

Only use the magnetic cable and magnetic connector included in the package. Standard iPhone/iPod touch recharger (5V1A) is strongly recommended for use with the magnetic cable. Using different chargers may result in failed charges.

Please refer to local regulations when you recycle this device.

Please contact your local purchasing source immediately if any abnormal incidents occur.

Although this device is designed to be drip-proof, long expose to rains may damage the installed iPhone/iPod touch. Please try to avoid dripping on the device. Wipe any drips from the device immediately. Do not try to recharge the device or disconnect the iPhone/iPod touch when the device is wet; there are risks of liquid leaking into the device through the connector.

Do not use this device in any circumstance which may cause significant impact to the device due to dropping or misuse by the user.

Scanning

The device will start scanning by pressing the trigger button on either side. Scanning can also be triggered from software depending on the app you use. Please contact the vendor of the app.

Charging

Recharging time is approximately 2 hours for this device.

Please make sure the device is fully recharged before using the device. When using this device simultaneously with the installed iPhone/iPod touch, please keep in mind that the battery of this device is designed to last longer than that of the iPhone/iPod touch.

The LED will be turned off when the device is fully recharged. The connector will continue to recharge the installed iOS devices until they are all fully recharged even though the LED indicator is off.

LED Indicator

The LED indicates the status of the device.

Red:Recharging Blue:Reading

※When reading during recharging, the LED will be displayed in purple.

Battery LED gauge shows the status of AsReader's battery. With iPhone/iPod touch, push the trigger button on AsReader for 5 seconds, the LED light will light as the current battery status.

Battery changing

Battery exchanges are available at user's cost. Battery exchanges by end-users are not allowed.

Notes on operating environment and on how to care for your device

Always make sure the device is clean when you use it. Depending on the circumstances in which you use the device, oil or chemicals may adhere to it, which can lead to damage of the casing of the device.

•Chemicals

Cosmetic products, detergents, pesticides, paint thinner, benzene, etc.

•Oil

Hand creams, animal oils such as beef tallow, etc. If the device is dirty, please clean it by wiping it with a soft, dry cloth. If you use volatile solvents or other chemicals to clean the device, this may lead to discoloration and/or other deterioration.

Maintenance

Please keep the device clean. Using solvents of high-volatility may cause color changes and performance problems.

Failure

If you experience any failure of this device, please contact your purchasing source.

Can not connect to iPhone/iPod touch

iPhone / iPod touch failures may cause errors on this device; please try to restart your iPhone / iPod touch device.

Please also make sure the device is properly connected with iPhone / iPod device through the lightning connector.

Can not scan

Make sure the device battery is charged. Otherwise, please make sure that the device has been set up with bar code parameters.

Supported Environment

You can find support information about this product on our website. Please refer to the website for details.

<AsReader Product website>
<https://www.AsReader.com>

- Warranty is 1year from date of purchase.
- Make sure to retain documents or receipts that can prove the date of purchase.
- Design and specifications are subjected to change without any notification.
- iPhone/iPod touch is the trademark of Apple Inc.

AsReader Inc.

6663 SW Beaverton Hillsdale Hwy., PMB 314
Portland, OR 97225-1403 U.S.A.

Tel: +1 (503) 770 2777

<https://www.AsReader.com>